

Baffle Wall Installation

ECHO ABSORBER™ Acoustic Baffle

Tools and Materials Needed


- 2 - 1 1/2 in. Washers
- 2 - 2 1/2 in. Drywall Screws
- Tape Measure and a Pencil
- 48 in. Level

Step 1

Note:

These instructions were created for wall mounted installations of ECHO ABSORBER™ Acoustic Baffles with dimensions of 2 ft. X 4 ft. One can adapt these instructions for a variety of sizes and applications. Use our instructions as a general guide. To cut, lay the material on a flat clean surface. Compress the material with a straight edge or level and cut with a sharp utility knife. For a quick cut, use a 6 1/2 in. Framing saw.

1) With the help of a 48 In. Level and a Pencil, create some reference lines where the edges of the ECHO ABSORBER™ Acoustic Baffle will be when installed.

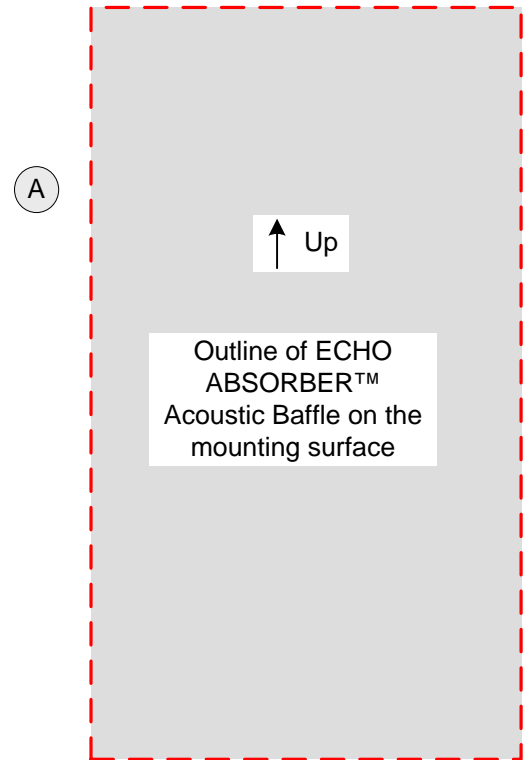

Step 2

1) Using the reference lines as a guide, attach the baffle to the wall with a 1 1/2 washer and a 2 1/2 Drywall Screw. (A)

