

Tools and Materials Needed


- 24 or 48 Inch Level
- Utility Knife
- Tape Measure & Pencil
- Sandpaper (150 grit or lower) for smooth surfaces
- Reinforced Foil Tape

Step 1

Note:

These instructions were created for the installation of ULTRA BARRIER™ PLUS /PSA with the dimensions of 4 X 4 ft. and to be installed on an existing wall or mounting surface. For new construction, it is recommended that you install this material on the Drywall, plywood or another rigid surface and then apply the composite to the studs. One can adapt these instructions for a variety of sizes and applications. Use our instructions as a general guide. PSA stands for Pressure Sensitive Adhesive. To assure good adhesion, it is very important to apply pressure as you install this product. Make sure all mounting surfaces are clean and dry. If applying this product to a smooth surface, it is recommended to rough the surface with 150 or coarser Sandpaper. It is easier to cut this material before it is installed. To cut, lay the material on on a flat clean surface foam / PSA side down. Compress the material with a straight edge or level and cut with a sharp Utility Knife.

(A)

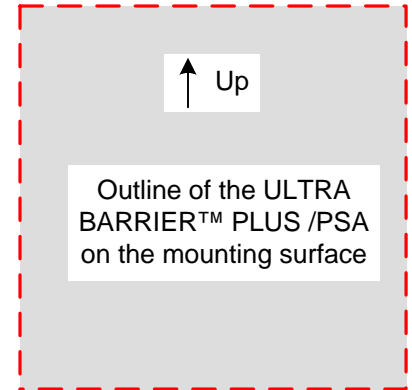

- 1) Wall surface or mounting surface should be clean and free of any obstructions. If a cleaning agent is needed, be sure to use one that will not leave a film or residue.
- 2) With the help of a 48 Inch Level and a Pencil, create some reference lines where the edges of the ULTRA BARRIER™ PLUS /PSA will be when installed. (A)

Step 2

- 1) With large pieces this step may require two people. Using the top and side reference lines as a guide, peel the first foot of backing from the top of the ULTRA BARRIER™ PLUS and apply it to the wall. As you peel the rest of the backing from the material, firmly press it on to the mounting surface. Be sure to use the reference lines as a guide. Try not to stretch the material as you apply it. (A)

(A)

